


Solution ID: 87600

How To Restore the Default Factory Settings on E-MU LONGboard and SHORTboard

Keywords / Key Phrases: how to restore default factory settings, e-mu longboard, shortboard

Follow the steps below to restore the default factory settings on E-MU LONGboard and SHORTboard:

1. Switch off the LONGboard or SHORTboard if it is powered on.
2. While pressing and holding the **Select** button on top panel of the keyboard, Slide on the Power On switch at the rear of the keyboard and release the **Select** button after 3-seconds. The LED display will display some numbers and then default to load Program #1 (Piano)

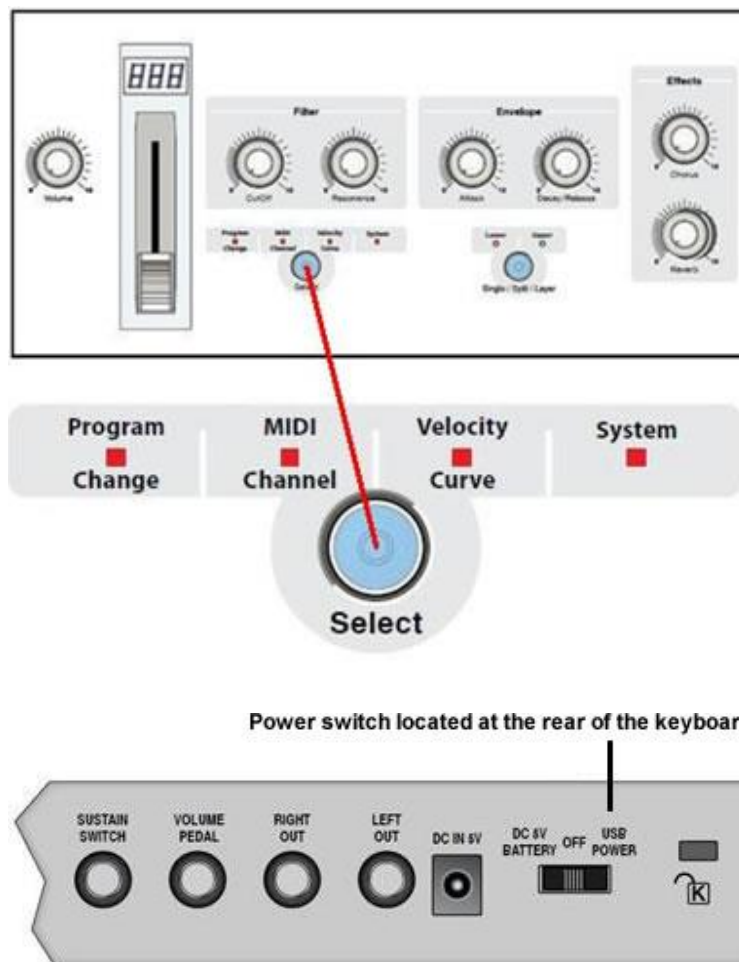

Last updated: June 23rd, 2010

Note: Product specification, technical or troubleshooting information are subjected to change. This is due to changes and/or updates in the new firmware/driver releases. Please refer to the web release notes in the download section for details.

